

LED Poster / LED Pro Poster

1



But the LED Poster settings with the <u>USB cable</u> can only be done with a

NETWORK	
YourNetw	orkName
PASSWORD	
YourPass	word



In order to communicate with your LED Poster or LED Pro Poster and publish your content, you need to connect the Poster to the Internet.



NUMAX

Network Connection Guide

3



Connect the RJ45 cable in your LED Poster or LED Pro Poster and in your local router. You can pass the RJ45 cable inside the plastic channel.



NUMAX

Network Connection Guide





Your Poster is connected! Start publishing, go to Page 9



1

Option 2: Wifi connection



Connect your computer to the display with the USB cable.





Network Connection Guide





Option 2: Wifi connection





	Networking		CloudSetting
	● (©	Save	
G	Networking Test Internet	-	CloudSettings

Option 2: Wifi connection



NUMAX

Ρ	LAN	4 G
w Password	•	
	Cance	Apply && Close

P D LAN	4 G
calNetwork	
v Password	
Cancel	Appl && C se



9

Option 2: Wifi connection

Remove the USB cable.

Your LED Poster or LED Pro Poster is now connected to your local network and can communicate with Nummax Manager server.





Network Connection Guide







Learn how to use Nummax Manager AIO (Cloud)

Book your online training now! https://calendly.com/nummaxmanager/nummax-manager-online-training

Download the complete Nummax Manager User's Guide https://nummax.com/en/download/

Check our online video tutorials https://nummax.com/academy/tuto.php

Nummax Manager LOCAL

Learn how to use Nummax Manager LOCAL (Free)

Download the complete Nummax Manager User's Guide https://nummax.com/en/download/

Check our online video tutorials https://nummax.com/academy/tuto.php NUMAX

Network Connection Guide





9